

1.

Remove plastic cap from the air inlet.



2.

Install an approved air fitting per your air system's specifications. This tool has a straight thread. If using a tapered thread fitting, you must use Teflon[®] tape.



3.

Attach the air hose and check for air leaks.



4.

To load nails, remove the air hose from the tool then slide the pusher towards the rear of the magazine. The rail cover will open to the side.



5.

Lock pusher into the magazine rail.



6.

Insert one strip of F/15 nails into the magazine channel with the points angled downward.



7.

Unlock the pusher and gently slide it forward until it makes contact with the fasteners.



8.

Attach the air hose to the tool and operate at 90 psi.

